



CONNECT VOLT ADAPTER

110 V	1 - 2
127 V	6 - 7
220 V	4 - 7
240 V	3 - 2

Play Back - Rewinding - Winding	1	I	1 - 7	13 - 15	17 - 19	23 - 31
Recording	1	II	2 - 8	14 - 16	18 - 20	24 - 32
			1 - 3	7 - 9	15 - 17	19 - 21
Play Back - Recording	2	III	101 - 103	102 - 104		
Aut. Stop	3					
Play Back - Recording - Winding	4	IV	302-303	305-306	307-308	
Rewinding	4	V	301-302	304-305	307-308	
Play Back - Recording	5	III	401-402			
Pause	6	VI	501-502			